Application

This device is used for measuring and monitoring axial and radial disengaging movements, e.g. on EAS[®]-clutches. It acts as a control sensor for electronic and mechanical sequences.

Function

When the sensor surface of the NAMUR sensor scans a metal control flag (damped), the signal relay is triggered, is deenergised and drops. Contacts 1 - 2 are opened. Damping is possible from all sides.

Electrical Connection (Terminal)

1 - 2 - 35 - 6 Potential-free two-way contact Connection input voltage

Design

The electronic amplifier is installed in a light metal housing. The limit switch is fixed using two screw-on mounting links attached diagonally with M4 cap screws.

Technical Data


Input voltage (dependent on design) Power consumption Ambient temperature Protection Conductor cross section Weight Protection fuse	230 VAC, ± 10 %, 50-60 Hz 115 VAC, ± 10 %, 50-60 Hz 24 VDC, PELV, ± 5 %, protected against reverse polarity, for overvoltage category II connection max. 1.5 VA -10 \mathbb{C} up to +60 \mathbb{C} limit switc h -25 \mathbb{C} up to +60 \mathbb{C} NAMUR sensor IP 54 max. 2.5 mm ² / AWG 14 400 g / 14 oz 0.1 A / fast acting at 24 VDC (in system)
Signalling relay	Potential-free two-way contacts Contact load max. 250 VAC/12 A Contact material AgNi 90/10 Max. frequency of operating cycles 20 Hz at min. load, 0.1 Hz at max. load
NAMUR sensor internal	Installed in a light metal housing, operating distance SN 2 mm, flush fitting, max. frequency of operating cycles 2 kHz, the zero point can be set per 1 mm by means of the lateral adjusting screw (SW 7).
NAMUR sensor external	metal housing M12 x 1, operating distance SN 2 mm, flush fitting, max. frequency of operating cycles 2 kHz, standard cable length 2 m, max. 100m with special design, Protection IP 67

Order Example


To be stated on order:	Туре	Connection voltage
Order number:	055.005	
Contactless sensing Sensor external 1 Sensor internal 2		230 VAC 115 VAC 24 VDC



Dimensions (internal NAMUR sensor)

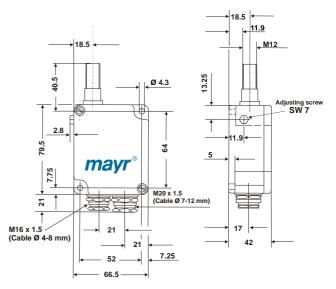

Dimensions (external NAMUR sensor)

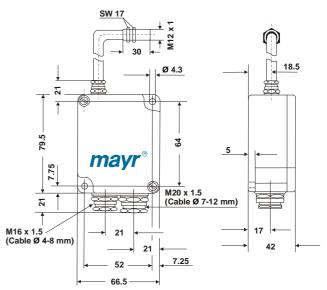

Telephone 08341/804-241 Fax 08341/804-422 http://www.mayr.de eMail: info@mayr.de



(M.05500+5.GB)

Page 1 of 1